

PLT f (MVAR)	Plot (RPN)					
g-shift						
f-shift						
unshifted	<var ₁ >	<var ₂ >*	<var...>			
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/C47/Menus/C47_Menu_PLSTAT_page_3.pdf

Next menu https://47calc.com/doc/C47/Menus/C47_Menu_PLTFCNS_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1	PLT f (MVAR)	MENU (item)	Plot (RPN)	Plot the RPN program (with MVAR variables) selected with TamLbIOnly menu ; presents menu for variable selection ; in Program Entry Mode, the RPN program must be specified by PGMPLOT and the variable to plot for using the TamVarOnly menu ; TAM : PLT f _ TamLbIOnly menu (uses TamVarOnly menu in PEM, to specify variable to plot for) ; Info : in Program Entry Mode, use PAUSE, SNAP or PLTFCNS to view the plot ; when SDIGS is set to the maximum value of 34, plotting uses 15 instead, otherwise it uses the value set by SDIGS	RPN Calculus and plotting		PLT f	
F1	<var ₁ >	Variable (user)	Variable 1	Variable 1 as created by MVAR (in RPN program) ; Info : After a value has been entered, the variable name is starred (<var ₁ >*) to indicate it is selected for a subsequent operation	Equations			
F2	<var ₂ >*	Variable (user)	Variable 2	Variable 2 as created by MVAR (in RPN program) (starred) ; Info : The variable name is starred (<var ₂ >*) after a value has been entered, to indicate it is selected for a subsequent operation	Equations			
F3	<var...>	Variable (user)	Variable ...	Next variable(s) if any, as created by MVAR (in RPN program) ; Info : After a value has been entered, the variable name is starred (<var...>*) to indicate it is selected for a subsequent operation	Equations			
F4								
F5								
F6								
fF1								
fF2								
fF3								
fF4								
fF5								
fF6								
gF1								
gF2								
gF3								
gF4								
gF5								
gF6								