

TamSto	TAM mode (store)					
g-shift	...EL	...IJ	...VEL ₁	...VEL ₂	...VEL ₃	REG
f-shift	Config	Stack	...VEL _{nn}	...INDEX	...Min	...Max
unshifted	→	VAR	X	Y	Z	T
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/C47/Menus/C47_Menu_TamShuffle_page_1.pdf

Next menu https://47calc.com/doc/C47/Menus/C47_Menu_TamStoTVM_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1	TamSto	MENU (TAM)	TAM mode (store)	Transient Alpha Mode is activated for trailing input (store) ; Info : α (f[XEQ]) or TAM [XEQ] activates TamAlpha ; Indirection ($\rightarrow$) activates TamIndirect ; TamSto menu is typically activated by [ST0]	Trailing input			
F1	$\rightarrow$	Command (TAM)	Indirection	Presented in TAM menus for commands accessing indirect input ; Info : Opens TamIndirect menu for the command that activated the current TAM menu	Trailing input			
F2	VAR	MENU (ASM)	VAR	Presented in TAM menus for commands accessing variables ; TAM : CAT.VARS.* menu ; Info : Type characters 1-2 to search ; Matrix variables STATS and HISTO are also included in this menu, if created	Trailing input		VAR	
F3	X	EasyAccess (TAM)	Register X	Easy access to Register X (100) : Stack level 1 ; TI : X:	Trailing input			
F4	Y	EasyAccess (TAM)	Register Y	Easy access to Register Y (101) : Stack level 2 ; TI : Y:	Trailing input			
F5	Z	EasyAccess (TAM)	Register Z	Easy access to Register Z (102) : Stack level 3 ; TI : Z:	Trailing input			
F6	T	EasyAccess (TAM)	Register T	Easy access to Register T (103) : Stack level 4 ; TI : T:	Trailing input			
fF1	Config	Command (TAM)	Store config	Presented in menu TamSto to store config in register or variable ; Shortcut : [ST0] - Config ; TAM : STOCFG __ TamSto menu ; Info : displays "Configuration data" in the stack	Trailing input		STOCFG	
fF2	Stack	Command (TAM)	Store stack	Presented in menu TamSto to store entire stack in 4 or 8 registers ; Shortcut : [ST0] - Stack ; TAM : STOS __ TamSto menu	Trailing input		STOS	
fF3	...VEL _{nn}	Command (TAM)	Store X into vector element	Presented in menu TamSto to store X into element n (TAM) of vector or matrix in Y ; Shortcut : [ST0] - ...VEL _{nn} ; TAM : STOVEL __ Tam menu	Trailing input		STOVEL	
fF4	...INDEX	Command (TAM)	Index matrix	Presented in menu TamSto to Index matrix in a register or variable ; set row I to 1, column J to 1 ; clear flags WRPEDG and WRPEND ; index wraps automatically, setting these flags ; index is dropped upon exit of matrix editor ; TAM : INDEX __ Tam menu ; TI : M[I _r J _c]=<name> [<row> <col>]	Trailing input		INDEX	
fF5	...Min	Command (TAM)	Store minimum	Presented in menu TamSto to store minimum of X and register or variable ; Shortcut : [ST0] - [▼] ; TAM : STO↓ __ TamSto menu	Trailing input		STO↓	
fF6	...Max	Command (TAM)	Store maximum	Presented in menu TamSto to store maximum of X and register or variable ; Shortcut : [ST0] - [▲] ; TAM : STO↑ __ TamSto menu	Trailing input		STO↑	
gF1	...EL	Command (TAM)	Store X into matrix element	Presented in menu TamSto to store X into current element of indexed matrix ; Shortcut : [ST0] - Config ; TI : M[I _r J _c]=<name> [<row> <col>]=	Trailing input		STOEL	
gF2	...IJ	Command (TAM)	Set current matrix index	Presented in menu TamSto to set current matrix index (row I and column J) ; Shortcut : [ST0] - ...IJ ; TI : M<name> :I _r = ; M<name> :J _c =	Trailing input		STOIJ	
gF3	...VEL ₁	Command (TAM)	Store X into vector element 1	Presented in menu TamSto to store X into element 1 of vector or matrix in Y	Trailing input		STOVEL ₁	
gF4	...VEL ₂	Command (TAM)	Store X into vector element 2	Presented in menu TamSto to store X into element 2 of vector or matrix in Y	Trailing input		STOVEL ₂	
gF5	...VEL ₃	Command (TAM)	Store X into vector element 3	Presented in menu TamSto to store X into element 3 of vector or matrix in Y	Trailing input		STOVEL ₃	
gF6	REG	MENU (TAM)	TAM (register)	Presented in TAM menus to quickly select lettered registers ; Info : Shortcut {A} indicates character key A (in TAM), etcetera ; Ref : https://47calc.com/doc/C47/Reference/C47_Registers.pdf	Trailing input			

p1	TamSto	Link
F1	→	
F2	VAR	https://47calc.com/doc/C47/Menus/C47_Menu_VAR_page_1.pdf
F3	X	
F4	Y	
F5	Z	
F6	T	
fF1	Config	
fF2	Stack	
fF3	...VEL _{nn}	
fF4	...INDEX	
fF5	...Min	
fF6	...Max	
gF1	...EL	
gF2	...IJ	
gF3	...VEL ₁	
gF4	...VEL ₂	
gF5	...VEL ₃	
gF6	REG	https://47calc.com/doc/C47/Menus/C47_Menu_REG_page_1.pdf