


C47 Ref page : HP35

To start HP35-mode, enter:
[XEQ] 'OPENM [ENTER] 'DEV [ENTER] and press HP35

To return to C47 enter:
[XEQ] 'OPENM [ENTER] 'DEV [ENTER] and press 47

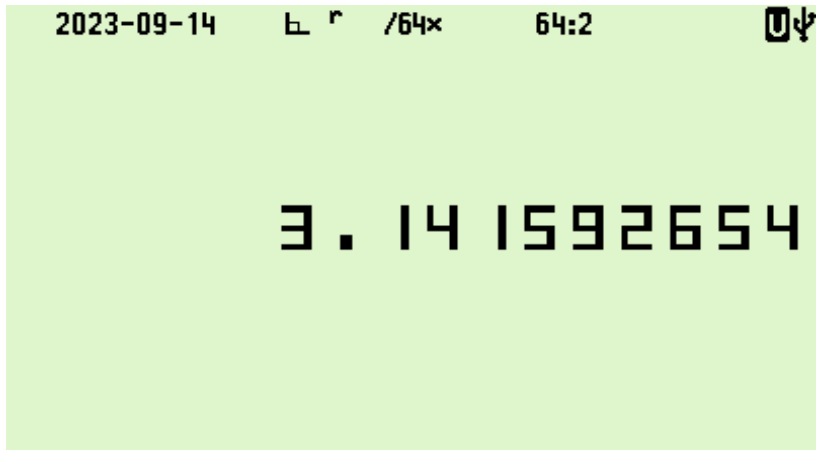

2023-09-14 L r /64x 64:2 

3.141592654

In HP35-mode, this configuration is set as indicated ; restored by RCLCFG 35 on return

Label	Fullname	Setting value
STOCFG	Store config	35
<none>	Set big display font size	
<none>	Clear pending key input	
CLRMOD	Clear modes	
CLSTK	Clear stack	
π	pi	
i R	input Real number	ON
SIG	SIGnificant digits notation	9
MyMb	MyMenu shown	OFF
HOMEb	HOME menu shown	OFF
RNG	Set number range	99
SDIGS	Set significant digits	16
dSTACK	Stack display lines	1
RAD	Set ADM to RAD	ON
SSIZE4	Stack size 4	ON
CPXRES	Complex results	CLEAR
SPCRES	Special results	CLEAR
eRPN	Entry RPN mode	CLEAR
fg.OFF	Menu f,g-highlighting Off	ON
<none>	Clear any pending TI	
IPGRP	IP group size	3
FPGRP	FP group size	3
IPGRP1	IP first group size	0
IPGRP1x	IP first group extension	0
IPART	Select IP separator	NONE
FPART	Select FP separator	NONE
RADIX	Select radix	WDOT •
R↑	Roll up	R↓
USER	USER mode	ON

This mode was inspired by the classic LED look:

