

C47 Ref page : SIM PC Keyboard International -- AIM ON

EXIT ESC	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	SYM (AIM) F12	F13
± or tilde	!	@	#	\$	%	^	&	*	(	)	_	+	
§ or ±	1	2	3	4	5	6	7	8	9	0	-	=	←
§ or `	1	2	3	4	5	6	7	8	9	0	-	=	BKSPC
TAB	q	w	e	r	t	y	u	i	o	p	{	}	
	Q	W	E	R	T	Y	U	I	O	P	{	}	
	Q	W	E	R	T	Y	U	I	O	P	[	]	
	q	w	e	r	t	y	u	i	o	p	[	]	
Capslock	a	s	d	f	g	h	j	k	l	:	"		ENTER Enter
	A	S	D	F	G	H	J	K	L	:	"		
	A	S	D	F	G	H	J	K	L	;	'	\	
	a	s	d	f	g	h	j	k	l	;	'	\	
f/g Shift		z	x	c	v	b	n	m	<	>	?	▲ Up	f/g Shift
	\	Z	X	C	V	B	N	M	,	.	/		
<g> Ctrl	Opt or Start	Cmd or Alt	Space							Alt	Left	▼ Down	Right

PC key	Key on the PC keyboard for controlling the simulator ("PC" can be a computer running Windows, macOS or Linux)	Startup from terminal
Unshifted	Unshifted function of the simulator controlled by the PC key	./c47 --auto (portrait if > 1024 vertical)
f-shift	f-shifted function of the simulator	./c47 --portrait
g-shift	g-shifted function of the simulator	./c47 --landscape
AltGr:	Function of the simulator activated when pressing alternate graphic modifier and symbol key (AltGr) available on some national keyboards	./c47 --functionkeys
No key	Function of the simulator that is not on the calculator keyboard but can be controlled by the PC key	./c47 --background <PNG>
LongpressNM	Function of the simulator that is available using longpress on the calculator keyboard and can be controlled by the PC key	./c47 --help
0	Pressing the associated PC key while in Alpha Input Mode makes the next key enter a Greek symbol or the special ε symbol	With focus on simulator
SIM state	Note that the C47 simulator stores its state in the PC filesystem as "backup.cfg"	Copy to clipboard:
Short integer	Short integer values can be entered on the PC keyboard, using 0-9, A-F (or a-f), , Enter (to change sign)	CTRL+h: Screen image
Ref page	https://47calc.com/doc/C47/Simulator/C47_SIM_Switches.pdf for an overview of all simulator switches	CTRL+c/x: X Register
		CTRL+d: Lettered Registers
		CTRL+a: All Registers
		CTRL+s: SNAP
		With focus on terminal
		CTRL+c: Terminate sim