

FPART	Select FP separator					
g-shift	FPGRP ₃				NSPC _{..} ○	
f-shift	WPER. ○	WCOM, ○	WDOT • ○	WTICK' ○	WSPC _{..} ○	UNDR_ ○
unshifted	PER. ○	COM, ○	DOT• ○	TICK' ○	SPC _{..} @	NONE ○
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/R47/Menus/R47v0_Menu_Floads_page_1.pdf

Next menu https://47calc.com/doc/R47/Menus/R47v0_Menu_Geom_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1	FPART	MENU	Select FP separator	Select fractional part separator	Display		FPART	
F1	PER. o	Setting (pgm)	FP separator period	Set fractional part separator to period	Display		FPER. o	OFF
F2	COM, o	Setting (pgm)	FP separator comma	Set fractional part separator to comma	Display		FCOM, o	OFF
F3	DOT. o	Setting (pgm)	FP separator dot	Set fractional part separator to dot	Display		FDOT. o	OFF
F4	TICK' o	Setting (pgm)	FP separator narrow tick	Set fractional part separator to narrow tick	Display		FTICK' o	OFF
F5	SPC_ o	Setting (pgm)	FP separator space	Set fractional part separator to space	Display		FSPC_ o	ON
F6	NONE o	Setting (pgm)	FP separator <none>	Set fractional part separator to <none> ; Info : Menu shows symbol ø	Display		FNONE o	OFF
fF1	WPER. o	Setting (pgm)	FP separator wide period	Set fractional part separator to wide period	Display		FWPER. o	OFF
fF2	WCOM, o	Setting (pgm)	FP separator wide comma	Set fractional part separator to wide comma	Display		FWCOM, o	OFF
fF3	WDOT • o	Setting (pgm)	FP separator wide dot	Set fractional part separator to wide dot	Display		FWDOT • o	OFF
fF4	WTICK' o	Setting (pgm)	FP separator tick	Set fractional part separator to tick	Display		FWTICK' o	OFF
fF5	WSPC_ o	Setting (pgm)	FP separator double space	Set fractional part separator to double space	Display		FWSPC_ o	OFF
fF6	UNDR_ o	Setting (pgm)	FP separator underscore	Set fractional part separator to underscore	Display		FUNDR_ o	OFF
gF1	FPGRP ₃	Setting (pgm)	FP group size	Set fractional part group size (2-9 digits) ; TAM : FPGRP _ TamNonReg menu	Display		FPGRP ₃	3
gF2								
gF3								
gF4								
gF5	NSPC_ o	Setting (pgm)	FP separator narrow space	Set fractional part separator to narrow space	Display		FNSPC_ o	OFF
gF6								