

INFO	Information					
g-shift						MENU#
f-shift	WHO	BATT	DISK	VOL#	DELAY#	STATE
unshifted	VERS	LSTERR	LASTT	KTYP	LocR#	MEM
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/R47/Menus/R47v0_Menu_I-O_page_2.pdf

Next menu https://47calc.com/doc/R47/Menus/R47v0_Menu_INFO_page_2.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1	INFO	MENU	Information	System information and some information about the value in the X-register	Information		INFO	
F1	VERS	Command (nonpgm)	Version	Show firmware version ; TI : Firmware version	System		VERS	
F2	LASTERR	Command	Last error	Retain error code of last function or command executed ; returns 0 for no error ; Ref : https://47calc.com/doc/R47/Reference/R47v0_Errors_and_messages.pdf ; Info : returns error code even when IGNIER (Ignore one error) is SET	Information		LASTERR	
F3	LASTT	Command	Last Ticks	Get number of ticks for the previous operation (command, function, program) ; Info : One tick is 100 ms	System		LASTT	
F4	KTYP	Command (logical)	Key type?	Get key type for key code returned by KEY? ; TAM : KTYP __ Tam menu ; Info : https://47calc.com/doc/R47/Reference/R47v0_KeyType.pdf	Programming		KTYP	
F5	LocR#	Command	Get number of local registers	Get number of local registers (current routine) ; Info : Set by LocR	Registers		LocR#	
F6	MEM	Command	Memory (RAM)	Get amount of free RAM memory, in bytes ; TI : Bytes =	System		MEM	
fF1	WHO	Command (nonpgm)	Who	Show calculator development team and contributor's names ; TI : Team names	System		WHO	
fF2	BATT	Command (HW)	Battery voltage	Get battery voltage ±1 mV ; hardware only ; TI : V = ; Info : Error 126 -- Not available on the simulator -- is raised when this command is performed on the simulator	System		BATT	
fF3	DISK	Command (HW)	Disk state	Get DMCP status of the FAT disk ; hardware only ; Info : Error 126 -- Not available on the simulator -- is raised when this command is performed on the simulator	System		DISK	
fF4	VOL#	Command (HW)	Get volume	Get volume (0-11) ; hardware only (DMCP setting) ; Info : Set by VOL ; Error 126 -- Not available on the simulator -- is raised when this setting is performed on the simulator	Input-Output		VOL#	11
fF5	▢DLAY#	Command	Get printer delay	Get printer delay	Printing			
fF6	STATE	Command	Last statefile loaded	Get name of last full statefile or backup loaded from STATE/<state>.s47, SAVFILES/R47.sav or SAVFILES/R47auto.sav ; TI : Last full state file loaded: <date>: <file>	Input-Output		STATE	
gF1								
gF2								
gF3								
gF4								
gF5								
gF6	MENU#	Command	Get current menu	Get current menu name ; followed by ↵ and page number if 2 or higher	Programming		MENU#	