

	Printer control					
g-shift						
f-shift						
unshifted	82240 @	Martel O			 MODE	 DELAY ₁₈
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/R47/Menus/R47v0_Menu_Integral-fd_page_1.pdf

Next menu https://47calc.com/doc/R47/Menus/R47v0_Menu_NRMKEY_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1		MENU	Printer control	Printer control ; the menu button, e.g. on [PRINT.1] gF1 shows the default printer selected :  82240 ; Info : Printing is available for new models and simulator, but is currently available on DM42 hardware only in some packages	Printing			
F1	82240 	Setting	HP-82240 printer	Set the printer type to HP-82240 ; Info : Select this option for the HP-82240A or HP-82240B, or any printer compatible with the HP-82240	Printing		82240 	ON
F2	Martel 	Setting	Martel printer	Set the printer type to Martel ; Info : The Martel printer supporting the HPIR interface may show some slight variations in character size or text position, in comparison to the 82240	Printing		Martel 	OFF
F3								
F4								
F5		Setting (pgm, strike)	Printer mode	Set printer mode ; TAM :  _ Tam menu ; Info : only mode 0 is implemented for the time being	Printing			0
F6	 18	Setting (pgm)	Set printer delay	Set printer delay time between lines ; TAM :  _ _ Tam menu ; Info : Set printer delay default (18) is set by DMCP ; on the simulator, the default is 0	Printing		 18	18
fF1								
fF2								
fF3								
fF4								
fF5								
fF6								
gF1								
gF2								
gF3								
gF4								
gF5								
gF6								