

SOLVE (MVAR)	Solver (RPN)					
g-shift						
f-shift						
unshifted	<var ₁ >	<var ₂ >*	<var...>			
Page 1	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/R47/Menus/R47v0_Menu_SIM_EQ_page_1.pdf

Next menu https://47calc.com/doc/R47/Menus/R47v0_Menu_Speed_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p1	SOLVE (MVAR)	Command (submnu)	Solver (RPN)	Real solver for the RPN program (with MVAR variables) selected with TamLblOnly menu ; presents menu for initial guesses and variable selection ; interrupt by [EXIT] ; tolerance set by SDIGS ; in Program Entry Mode, the RPN program must be specified by PGMSLV and the variable to solve for using the TamVarOnly menu ; SOLVE will skip the next program step if no root is found ; TAM : SOLVE __ TamLblOnly menu (uses TamVarOnly menu in PEM, to specify variable to solve for) ; Info : displays current top and bottom results and iteration counter ; shown if flag MONIT is SET ; Displays : Accuracy $\approx$; <var!..n> =	RPN Calculus and plotting		SOLVE	
F1	<var ₁ >	Variable (user)	Variable 1	Variable 1 as created by MVAR (in RPN program) ; Info : After a value has been entered, the variable name is starred (<var ₁ >*) to indicate it is selected for a subsequent operation	Equations			
F2	<var ₂ >*	Variable (user)	Variable 2	Variable 2 as created by MVAR (in RPN program) (starred) ; Info : The variable name is starred (<var ₂ >*) after a value has been entered, to indicate it is selected for a subsequent operation	Equations			
F3	<var...>	Variable (user)	Variable ...	Next variable(s) if any, as created by MVAR (in RPN program) ; Info : After a value has been entered, the variable name is starred (<var...>*) to indicate it is selected for a subsequent operation	Equations			
F4								
F5								
F6								
fF1								
fF2								
fF3								
fF4								
fF5								
fF6								
gF1								
gF2								
gF3								
gF4								
gF5								
gF6								