

VAR (ALL)	VAR					
g-shift						
f-shift						
unshifted	↓EST	↓Lim	↓X	↓Y		
Page 2	F1	F2	F3	F4	F5	F6

Prev menu https://47calc.com/doc/R47/Menus/R47v0_Menu_VAR_page_1.pdf

Next menu https://47calc.com/doc/R47/Menus/R47v0_Menu_VarMNU_page_1.pdf

Level	Label	Type	FullName	Extended description	Category	Flag	Catalog	Default
Menu p2	VAR (ALL)	MENU (ASM)	VAR	Presented in TAM menus for commands accessing variables ; TAM : CAT.VARS.+ menu ; Info : Type characters 1-2 to search ; Matrix variables STATS and HISTO are also included in this menu, if created	Trailing input		VAR	
F1	↓EST	Variable (real)	Lower estimate for solver	Reserved Real variable for the lower estimate for solver (↓Est) ; displays as ↓E in menu ToolS for larger values ; set interactively from menu ToolS and set by realSlv _y ^x or cpxSlv _y ^x ; Split screen : Displaying ↑Est Upper = ; ↓Est Lower =	Solver		↓EST	0
F2	↓Lim	Variable (real)	Lower limit for integrator	Reserved Real variable for the lower limit for integrator (↓Lim) ; displays as ↓L in menu ToolS for larger values ; set interactively from menu ToolS and set by f _y ^x ; TI : ↓ Lower limit :	Integrator		↓Lim	0
F3	↓X	Variable (real)	Lower limit for X-axis	Reserved Real variable for the lower limit for X-axis (↓X) ; set interactively from menu Graphs and set by Draw _y ^x ; TI : '↓X' :	Plotting		↓X	-10
F4	↓Y	Variable (real)	Lower limit for Y-axis	Reserved Real variable for the lower limit for Y-axis (↓Y) ; set interactively from menu Graphs and set by Plot functions ; TI : '↓Y' :	Plotting		↓Y	0
F5								
F6								
fF1								
fF2								
fF3								
fF4								
fF5								
fF6								
gF1								
gF2								
gF3								
gF4								
gF5								
gF6								