

AUDIO	Audio MENU - cat : AUDIO	Audio commands	Category: Input-Output File: C47_Menu_AUDIO...
--------------	--------------------------	----------------	---

Menu	AUDIO	1	2	3	4	5	6
3	g-shift						
2	f-shift						VOL ₁₁
1	unshifted	BEEP	TONE	BUZZ	PLAY	VOL↓ ₁₁	VOL↑ ₁₁
Page	1	F1	F2	F3	F4	F5	F6

--	--

AUDIO	Page 1	F-key	Button label (complete)	Full name	Description (extended)	Type	Flag name	Additional information	Catalog	Default	Status
		F1	BEEP	Beep	Play beep sound (4 tones)	Command			BEEP		
		F2	TONE	Tone	Tone (range 0..9)	Command		TAM : TONE _ TamNonReg menu	TONE		
		F3	BUZZ	Buzzer	Play sound (input from stack : frequency in Hz (0 = silent) ; duration in ms (max 2000)) ; hardware only	Command (HW)			BUZZ		
		F4	PLAY	Play sounds	Play sounds (input from nx3 or nx2 matrix variable having rows : [frequency, duration, volume] with frequency in Hz (0 = silent) ; duration in ms (max 2000) ; volume) ; volume element is optional) ; hardware only	Command (HW)		TAM : PLAY _ TamLabel menu	PLAY		
		F5	VOL↓	Volume down	Set volume down (range 0..11) ; hardware only	Setting (HW)	<no flag>		VOL↓ ₁₁	11	Value
		F6	VOL↑	Volume up	Set volume up (range 0..11) ; hardware only	Setting (HW)	<no flag>		VOL↑ ₁₁	11	Value

fShifted F1	<empty>										
fShifted F2	<empty>										
fShifted F3	<empty>										
fShifted F4	<empty>										
fShifted F5	<empty>										
fShifted F6	VOL	Volume	Set audio volume (range 0..11) ; hardware only	Setting (pgm ; HW)	<no flag>	TAM : VOL _ TamNonReg menu	VOL ₁₁	11	Value		

gShifted F1	<empty>										
gShifted F2	<empty>										
gShifted F3	<empty>										
gShifted F4	<empty>										
gShifted F5	<empty>										
gShifted F6	<empty>										