

Dist:	Distance conversion MENU - cat : Dist:	Convert between units of distance	Category: Unit conversion
--------------	--	-----------------------------------	---------------------------

page scrolling indicator : ▲ ▼

Menu	Dist:	1	2	3	4	5	6
3	gShifted			chǐ →	← m	fēn →	← m
2	fShifted			zhàng →	← m	cùn →	← m
1	primary	lǐ →	← m	yǐn →	← m		
Page	2	F1	F2	F3	F4	F5	F6

--	--

Dist:	Page 2	F-key	Button label	Full name	Extended description	Type	Flag name	Additional information	Catalog	Default	Status
		F1	lǐ → m	lǐ to m	Convert lǐ to meter	Function (linked)		TI : m:	lǐ→m		LeftLink
		F2	m → lǐ	m to lǐ	Convert meter to lǐ	Function (linked)		TI : lǐ:	m→lǐ		RightLink
		F3	yǐn → m	yǐn to m	Convert yǐn to meter	Function (linked)		TI : m:	yǐn→m		LeftLink
		F4	m → yǐn	m to yǐn	Convert meter to yǐn	Function (linked)		TI : yǐn:	m→yǐn		RightLink
		F5	<empty>								
		F6	<empty>								

fShifted F1	<empty>										
fShifted F2	<empty>										
fShifted F3	zhàng → m	zhàng to m	Convert zhàng to meter	Function (linked)		TI : m:	zhàng→m		LeftLink		
fShifted F4	m → zhàng	m to zhàng	Convert meter to zhàng	Function (linked)		TI : zhàng:	m→zhàng		RightLink		
fShifted F5	cùn → m	cùn to m	Convert cùn to meter	Function (linked)		TI : m:	cùn→m		LeftLink		
fShifted F6	m → cùn	m to cùn	Convert meter to cùn	Function (linked)		TI : cùn:	m→cùn		RightLink		

gShifted F1	<empty>										
gShifted F2	<empty>										
gShifted F3	chǐ → m	chǐ to m	Convert chǐ to meter	Function (linked)		TI : m:	chǐ→m		LeftLink		
gShifted F4	m → chǐ	m to chǐ	Convert meter to chǐ	Function (linked)		TI : chǐ:	m→chǐ		RightLink		
gShifted F5	fēn → m	fēn to m	Convert fēn to meter	Function (linked)		TI : m:	fēn→m		LeftLink		
gShifted F6	m → fēn	m to fēn	Convert meter to fēn	Function (linked)		TI : fēn:	m→fēn		RightLink		