

PREF	Preferences MENU - cat : PREF	System (mode) settings with status indication and modification				Category: Settings File: C47_Menu_PREF...
-------------	-------------------------------	--	--	--	--	--

page scrolling indicator: ▲▼

Menu	PREF	1	2	3	4	5	6
3	g-shift	F.14 ()	F.124 (•)	F.1234 (•)	KEY.LP [•]	MyM.3 []	HOME.3 [•]
2	f-shift	M.14 ()	M.124 ()	M.1234 (•)		MyMb [•]	HOMEb []
1	unshifted	fg.OFF ()	fg.LIM ()	fg.FUL (•)	g.2Tp [•]	SH.4s []	S.RESET
Page	3	F1	F2	F3	F4	F5	F6

Info	Menu PREF replaced by MODE in this layout: C47
------	--

PREF	Page 3			Type	Flag name	Additional information	Catalog	Default	Status
F-key	Button label (complete)	Full name	Description (extended)						
F1	fg.OFF	Menu fg-highlighting Off	Do not show horizontal f- and g-lines indicating the state of the f- or g-shift in menu	Setting	<no flag>		fg.OFF ()	OFF	Radiobutton
F2	fg.LIM	Menu fg-highlighting Limited	Show limited horizontal f- and g-lines indicating the state of the f- or g-shift in menu	Setting	<no flag>		fg.LIM ()	OFF	Radiobutton
F3	fg.FUL	Menu fg-highlighting Full	Show full horizontal f- and g-lines indicating the state of the f- or g-shift in menu	Setting	<no flag>		fg.FUL (•)	ON	Radiobutton
F4	g.2Tp	Function keys g-shortcut	Allow double tapping the FN-keys for a g-function	Setting	<no flag>	Info : Blocked for navigation FN-keys (arrows) in editors	g.2Tp [•]	ON	Checkbox
F5	SH.4s	Shift time-out 4s	Set shift to time out after 4 seconds	Setting	<no flag>		SH.4s []	OFF	Checkbox
F6	S.RESET	Reset f/g timers	Safe reset, then toggle ON/OFF all accessibility related options: fg.FUL (•) ; g.2Tp [•] ; SH.4s [] ; HOME.3 [•]	Command			S.RESET		

fShifted F1	M.14	Math keys skip fg	Longpress control : skip f and g Math keys longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 4 NOP		OFF	Radiobutton
fShifted F2	M.124	Math keys skip g	Longpress control : skip g Math keys longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 2 f-shift ; 4 NOP		OFF	Radiobutton
fShifted F3	M.1234	Math keys full cycle	Longpress control : full Math keys longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 2 f-shift ; 3 g-shift ; 4 NOP		ON	Radiobutton
fShifted F4	<empty>								
fShifted F5	MyMb	MyMenu shown	Base MyMenu shown (when all menus are exited using EXIT)	Setting	<no flag>	Info : MyMb and HOMEb are linked (both cannot be active)	MyMb [•]	ON	Checkbox
fShifted F6	HOMEb	HOME menu shown	Base HOME menu shown (when all menus are exited using EXIT)	Setting	<no flag>	Info : HOMEb and MyMb are linked (both cannot be active)	HOMEb []	OFF	Checkbox

gShifted F1	F.14	Function keys skip fg	Longpress control : skip f and g Function key longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 4 NOP		OFF	Radiobutton
gShifted F2	F.124	Function keys skip g	Longpress control : skip g Function key longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 2 f-shift ; 4 NOP		ON	Radiobutton
gShifted F3	F.1234	Function keys full cycle	Longpress control : full Function key longpress cycle	Setting	<no flag>	Info : 1 unshifted ; 2 f-shift ; 3 g-shift ; 4 NOP		OFF	Radiobutton
gShifted F4	KEY.LP	Long keypress	Switch on long keypress options for <none>	Setting	KEY.LP	Info : For R47 f/g layout only	KEY.LP [•]	ON	Checkbox
gShifted F5	MyM.3	MyMenu fff shortcut	MyMenu activated by triple (or longer) shift ([f/g])	Setting	<no flag>	Info : MyM.3 and HOME.3 are linked (both cannot be active) ; for layouts containing key [f/g] only	MyM.3 []	OFF	Checkbox
gShifted F6	HOME.3	HOME menu fff shortcut	HOME menu activated by triple (or longer) shift ([f/g])	Setting	<no flag>	Info : HOME.3 and MyM.3 are linked (both cannot be active) ; for layouts containing key [f/g] only	HOME.3 [•]	ON	Checkbox