

TamKey	TAM mode KEY MENU (TAM)	Transient alpha mode is activated for trailing input (KEYG, KEYX)	Category: Trailing input
---------------	-------------------------	---	--------------------------

Menu	TamKey	1	2	3	4	5	6
3	gShifted	13	14	15	16	17	18
2	fShifted	7	8	9	10	11	12
1	primary	1	2	3	4	5	6
Page	1	F1	F2	F3	F4	F5	F6

--	--	--	--	--	--	--	--

TamKey	Page 1	F-key	Button label	Full name	Extended description	Type	Flag name	Additional information	Catalog	Default	Status
F1	1	1	1	1	Soft button 1 for selection by KEYG or KEYX function	Button (black)					
F2	2	2	2	2	Soft button 2 for selection by KEYG or KEYX function	Button (black)					
F3	3	3	3	3	Soft button 3 for selection by KEYG or KEYX function	Button (black)					
F4	4	4	4	4	Soft button 4 for selection by KEYG or KEYX function	Button (black)					
F5	5	5	5	5	Soft button 5 for selection by KEYG or KEYX function	Button (black)					
F6	6	6	6	6	Soft button 6 for selection by KEYG or KEYX function	Button (black)					

fShifted F1	7	7	7	7	Soft button 7 for selection by KEYG or KEYX function	Button (black)					
fShifted F2	8	8	8	8	Soft button 8 for selection by KEYG or KEYX function	Button (black)					
fShifted F3	9	9	9	9	Soft button 9 for selection by KEYG or KEYX function	Button (black)					
fShifted F4	10	10	10	10	Soft button 10 for selection by KEYG or KEYX function	Button (black)					
fShifted F5	11	11	11	11	Soft button 11 for selection by KEYG or KEYX function	Button (black)					
fShifted F6	12	12	12	12	Soft button 12 for selection by KEYG or KEYX function	Button (black)					

gShifted F1	13	13	13	13	Soft button 13 for selection by KEYG or KEYX function	Button (black)					
gShifted F2	14	14	14	14	Soft button 14 for selection by KEYG or KEYX function	Button (black)					
gShifted F3	15	15	15	15	Soft button 15 for selection by KEYG or KEYX function	Button (black)					
gShifted F4	16	16	16	16	Soft button 16 for selection by KEYG or KEYX function	Button (black)					
gShifted F5	17	17	17	17	Soft button 17 for selection by KEYG or KEYX function	Button (black)					
gShifted F6	18	18	18	18	Soft button 18 for selection by KEYG or KEYX function	Button (black)					