

C47_Abbreviations

Abbrev	Meaning	Description
ADM	Angular Display Mode	Determines angle type for numbers not explicitly tagged
AIM	Alpha Input Mode ; opens menu α in UPPE	Activated by α
ASM	Alpha Selection Mode ; starts UPPERCASE	Alpha selection is automatically waiting for the first alpha. Press first character, then second, to search while the underscore is shown in the status bar for three seconds, while the entered search characters are also shown in the status bar
Cat	Catalog	Label shown in Catalog, on longpress (depending on settings) and in programming
CRA	Current Register Address	Used by STOPW
DMCP	DM Calculator Platform	The base software layer of the DM hardware that C47 runs on
EIM	Equation Input Mode ; starts lowercase	Activated by EQ.NEW
MIM	Matrix Input Mode	Activated by M.NEW
NIM	Numeric Input Mode	Started by numeric keypad
PEM	Program Entry Mode ; starts UPPERCASE	Activated by PRGM
Ref	Reference page	Indicates availability of additional reference information on a subject (documentation)
SBI	Status Bar Information	Information shown permanently in the status bar depending on settings, flags, etc.
tag	ADM label	Indicates angular display mode, attached to number on stack
TAM	Transient Alpha Mode	Started by commands requiring trailing input, presenting specialised menus designed to facilitate parameter input like registers, variables, labels, flags or softbuttons
TI	Temporary Information	Labels shown temporarily on the left side of the stack