

C47 Simulator PC keyboard shortcuts (German)

EXIT	F1	F2	F3	F4	F5	F6	a ^{b/c}	#	.ms	.d	F11	F12	F13
ESC	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	F13
10 ^x	x!	"	§	\$	%	&	÷	()	.d	?	`	
°	1	2	3	4	5	6	7	8	9	0	R/S		←
^	1	2	3	4	5	6	7	8	9	0	ß + AltGr \	'	BKSPC
TAB	x ²	LASTx	e	→R	ATAN	x	USER	[DISP]	10 ^x	→P	Ü	x	
	Q	W	E	R	T	Z	U	l	O	P		*	
	√x	x↔y	EEX	RCL	TAN		↵	i	LOG	π		+	
	q	w	e	r	t	z	u	i	o	p		+	
Capslock	≠	ASIN	R↑	[Prefix]	GTO	[HOME]	[EXP]	[STK]	e ^x		Ö	Ä	[α]
	A	S	D	F	G	H	J	K	L				'
	Σ+	SIN	R↓	f/g			i		LN				ENTER
	a	s	d	f	g	h	j	k	l	ö	ä	#	Enter
	DRG	y ^x	COMPLEX	ACOS	1/x	[MyMenu]	PRGM	[MODE]					
	>	Y	X	C	V	B	N	M	;	:	-		
f/g	x	∑y	XEQ	COS	1/x	LBL	CHS	STO	.	.	-	▲	f/g
Shift	< + AltGr	y	x	c	v	b	n	m	,	.	-	▲	Shift
Ctrl	Opt or Start	Cmd or Alt	Space							AltGr	Left	Down	Right

PC key	Key on the PC keyboard for controlling the simulator
Unshifted	Unshifted function of the simulator controlled by the PC key
f-shift	f-shifted function of the simulator
g-shift	g-shifted function of the simulator
AltGr	Function of the simulator activated when pressing alternate graphic modifier and symbol key (AltGr) available on some national keyboards
No key	Function of the simulator that is not on the calculator keyboard but can be controlled by the PC key
Longpress	Function of the simulator that is available using longpress on the calculator keyboard and can be controlled by the PC key