


C47
alphaSIM

C47\_keyboard\_layer\_alphaSIM  
 SWI\_ARM\_ON = FALSE

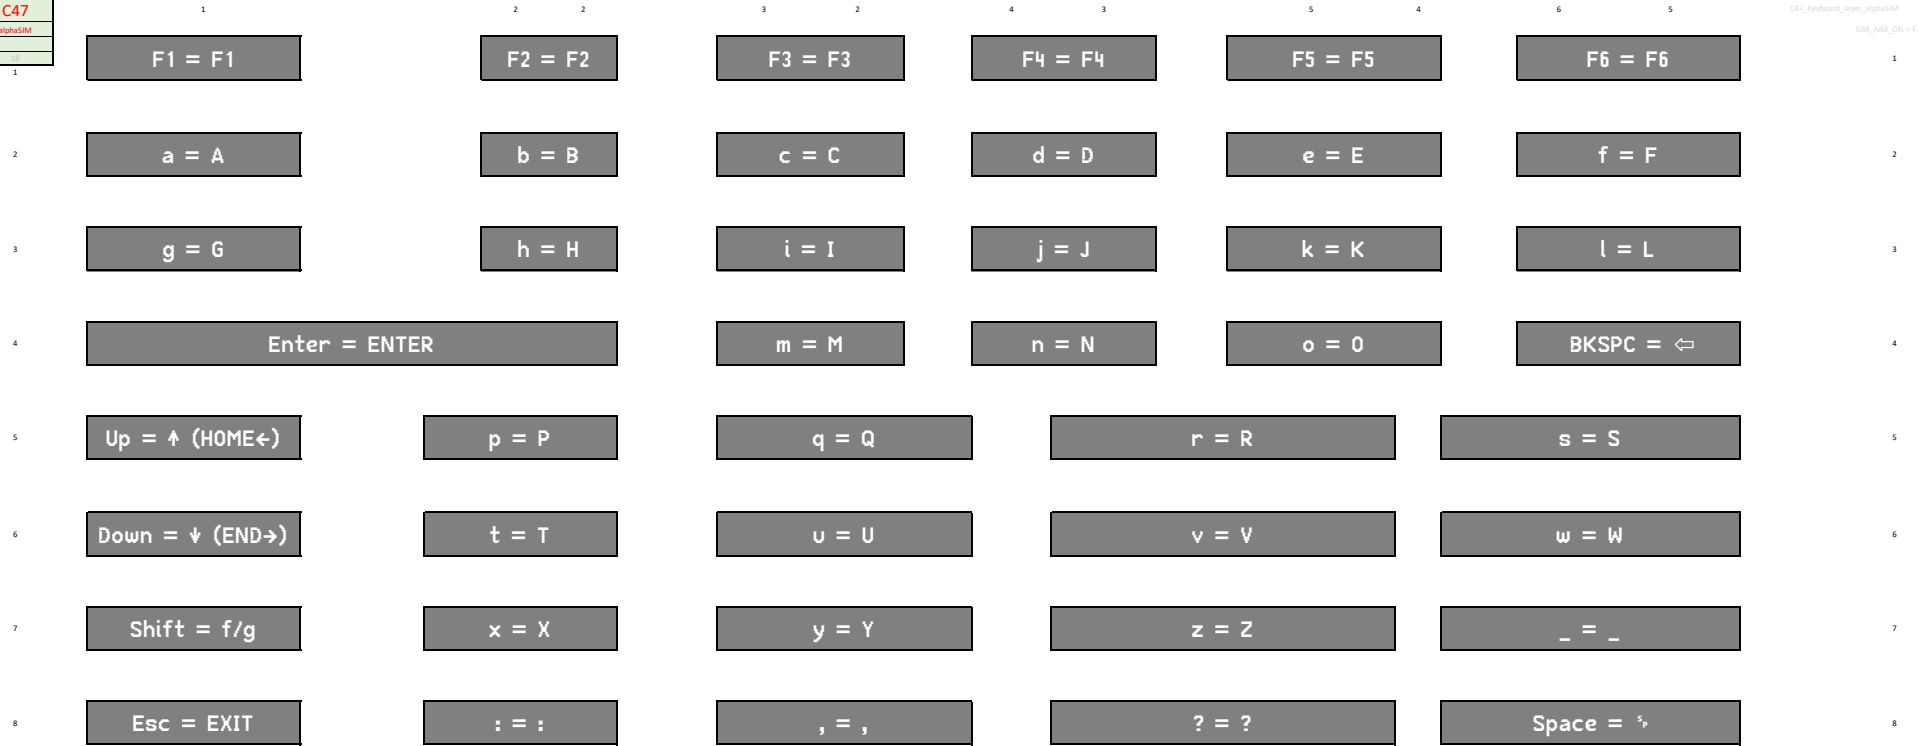

R47 sublayout

1 2 3 4 5

---

C47 layout : alphaSIM layer

alphaSIM keyboard shortcut		